



GENUINE PARTS



## INSTALLATION INSTRUCTIONS

1. **DESCRIPTION:** Hitch Ball Mount (Class III)

2. **APPLICATION:** See Dealer Application Charts

3. **PART NUMBER:** 999T7 WQ810


4. **KIT CONTENTS:**

Item No.	Reqd.	Name
1	1	Draw Bar
2	1	5/8" Pull Pin
3	1	Clip

5. **TOOLS REQUIRED:** None

6. **INSTALLATION PRECAUTIONS/NOTES:**

Insert Draw Bar(#1) into receiver opening. Line up holes on receiver with holes on Draw Bar and push Pull Pin(#2) through opening. Insert Clip(#3) through hole in Pull Pin. Be sure clip is fastened securely.

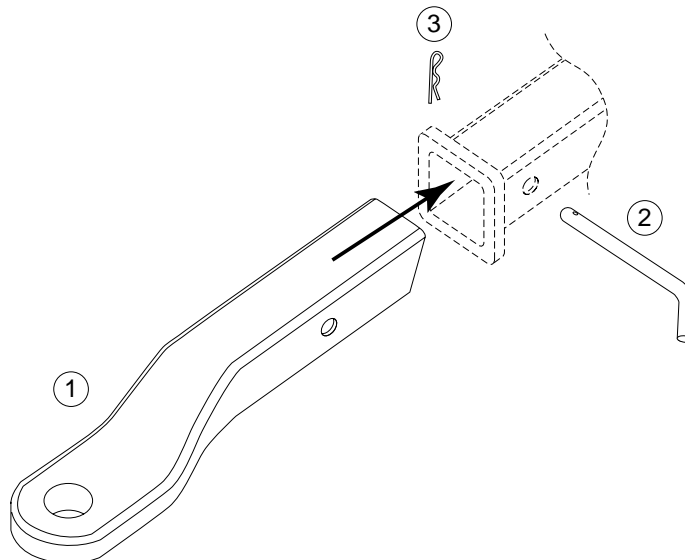

**NOTE: REFER TO OWNER'S MANUAL FOR TOWING CAPACITY**